

Anschlußnummern der Taster-Kette 1

		1		2		3		4		5		6		7	
Leiterbahn-Seite	Bestückungs-Seite	1005	1004	1037	1036	1069	1068	1101	1100	1133	1132	1165	1164	1197	1196
		1006	1003	1038	1035	1070	1067	1102	1099	1134	1131	1166	1163	1198	1195
		1007	1002	1039	1034	1071	1066	1103	1098	1135	1130	1167	1162	1199	1194
		1008	1001	1040	1033	1072	1065	1104	1097	1136	1129	1168	1161	1200	1193
		1009	1016	1041	1048	1073	1080	1105	1112	1137	1144	1169	1176	1201	1208
		1010	1015	1042	1047	1074	1079	1106	1111	1138	1143	1170	1175	1202	1207
		1011	1014	1043	1046	1075	1078	1107	1110	1139	1142	1171	1174	1203	1206
		1012	1013	1044	1045	1076	1077	1108	1109	1140	1141	1172	1173	1204	1205
		1021	1020	1053	1052	1085	1084	1117	1116	1149	1148	1181	1180	1213	1212
		1022	1019	1054	1051	1086	1083	1118	1115	1150	1147	1182	1179	1214	1211
1023	1018	1055	1050	1087	1082	1119	1114	1151	1146	1183	1178	1215	1210		
1024	1017	1056	1049	1088	1081	1120	1113	1152	1145	1184	1177	1216	1209		
1025	1032	1057	1064	1089	1096	1121	1128	1153	1160	1185	1192	1217	1224		
1026	1031	1058	1063	1090	1095	1122	1127	1154	1159	1186	1191	1218	1223		
1027	1030	1059	1062	1091	1094	1123	1126	1155	1158	1187	1190	1219	1222		
1028	1029	1060	1061	1092	1093	1124	1125	1156	1157	1188	1189	1220	1221		
Leiterbahn-Seite	Bestückungs-Seite	1229	1228	1261	1260	1293	1292	1325	1324	1357	1356	1389	1388	1421	1420
		1230	1227	1262	1259	1294	1291	1326	1323	1358	1355	1390	1387	1422	1419
		1231	1226	1263	1258	1295	1290	1327	1322	1359	1354	1391	1386	1423	1418
		1232	1225	1264	1257	1296	1289	1328	1321	1360	1353	1392	1385	1424	1417
		1233	1240	1265	1272	1297	1304	1329	1336	1361	1368	1393	1400	1425	1432
		1234	1239	1266	1271	1298	1303	1330	1335	1362	1367	1394	1399	1426	1431
		1235	1238	1267	1270	1299	1302	1331	1334	1363	1366	1395	1398	1427	1430
		1236	1237	1268	1269	1300	1301	1332	1333	1364	1365	1396	1397	1428	1429
		1245	1244	1277	1276	1309	1308	1341	1340	1373	1372	1405	1404	1437	1436
		1246	1243	1278	1275	1310	1307	1342	1339	1374	1371	1406	1403	1438	1435
1247	1242	1279	1274	1311	1306	1343	1338	1375	1370	1407	1402	1439	1434		
1248	1241	1280	1273	1312	1305	1344	1337	1376	1369	1408	1401	1440	1433		
1249	1256	1281	1288	1313	1320	1345	1352	1377	1384	1409	1416	1441	1448		
1250	1255	1282	1287	1314	1319	1346	1351	1378	1383	1410	1415	1442	1447		
1251	1254	1283	1286	1315	1318	1347	1350	1379	1382	1411	1414	1443	1446		
1252	1253	1284	1285	1316	1317	1348	1349	1380	1381	1412	1413	1444	1445		
Leiterbahn-Seite	Bestückungs-Seite	1453	1452	1485	1484	1517	1516	1549	1548	1581	1580	1613	1612	1645	1644
		1454	1451	1486	1483	1518	1515	1550	1547	1582	1579	1614	1611	1646	1643
		1455	1450	1487	1482	1519	1514	1551	1546	1583	1578	1615	1610	1647	1642
		1456	1449	1488	1481	1520	1513	1552	1545	1584	1577	1616	1609	1648	1641
		1457	1464	1489	1496	1521	1528	1553	1560	1585	1592	1617	1624	1649	1656
		1458	1463	1490	1495	1522	1527	1554	1559	1586	1591	1618	1623	1650	1655
		1459	1462	1491	1494	1523	1526	1555	1558	1587	1590	1619	1622	1651	1654
		1460	1461	1492	1493	1524	1525	1556	1557	1588	1589	1620	1621	1652	1653
		1469	1468	1501	1500	1533	1532	1565	1564	1597	1596	1629	1628	1661	1660
		1470	1467	1502	1499	1534	1531	1566	1563	1598	1595	1630	1627	1662	1659
1471	1466	1503	1498	1535	1530	1567	1562	1599	1594	1631	1626	1663	1658		
1472	1465	1504	1497	1536	1529	1568	1561	1600	1593	1632	1625	1664	1657		
1473	1480	1505	1512	1537	1544	1569	1576	1601	1608	1633	1640	1665	1672		
1474	1479	1506	1511	1538	1543	1570	1575	1602	1607	1634	1639	1666	1671		
1475	1478	1507	1510	1539	1542	1571	1574	1603	1606	1635	1638	1667	1670		
1476	1477	1508	1509	1540	1541	1572	1573	1604	1605	1636	1637	1668	1669		
Leiterbahn-Seite	Bestückungs-Seite	1677	1676	1709	1708	1741	1740	1773	1772						
		1678	1675	1710	1707	1742	1739	1774	1771						
		1679	1674	1711	1706	1743	1738	1775	1770						
		1680	1673	1712	1705	1744	1737	1776	1769						
		1681	1688	1713	1720	1745	1752	1777	1784						
		1682	1687	1714	1719	1746	1751	1778	1783						
		1683	1686	1715	1718	1747	1750	1779	1782						
		1684	1685	1716	1717	1748	1749	1780	1781						
		1693	1692	1725	1724	1757	1756	1789	1788						
		1694	1691	1726	1723	1758	1755	1790	1787						
1695	1690	1727	1722	1759	1754	1791	1786								
1696	1689	1728	1721	1760	1753	1792	1785								
1697	1704	1729	1736	1761	1768	1793	1800								
1698	1703	1730	1735	1762	1767	1794	1799								
1699	1702	1731	1734	1763	1766	1795	1798								
1700	1701	1732	1733	1764	1765	1796	1797								